

TransMount Image Transmission Transmitter Camera Compatibility List



V1.20

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Sony	α9	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-	[A] HDMI Mini to HDMI Micro (optional)	Micro USB 3.0 to Multi USB (LN-MCUS-A03)	<ol style="list-style-type: none"> Set [HDMI Resolution] in [HDMI Settings] to [1080P]. Set [HDMI Info. Display] in [HDMI Settings] to [Off] to get live preview image both on camera screen and your phone via the transmitter. It is recommended to set [Auto Review] to [Off]. 	V5.00
	α7R4	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V1.00
	α7R3	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V3.01
	α7M3	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V4.00
	α7R2	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V3.00
	a6600	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V1.00
	a6500	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V1.06
	a6400	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V2.00
	a6300	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-				V2.01
a6100	√	√	√	√	√	-	-	-	-	-	-	-	-	√	√	-	V0.53				
Panasonic	GH5	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[C] HDMI Mini to HDMI (optional)	Micro USB to Type-C USB (LN-MBUC-B01)	<ol style="list-style-type: none"> Please choose PC (Tether) for your camera's USB mode. Please apply electronic follow focus function in MF mode of the lens. It is recommended to set [Auto Review] and [Duration Time (photo)] to [Off]. 	V2.5
	GH5S	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V1.3
	S1	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V1.2
	S1H	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				V0.53
Canon	5D3	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Mini USB (ZW-Mini-002)	<ol style="list-style-type: none"> Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera. Set [HDMI Output + LCD] to [Mirroring] to get live preview image both on camera screen and your phone via the transmitter. The camera must stay in live view mode when applying image transmission feature. It is recommended to set [Image confirmation] to [Off]. 	V1.3.5
	5D4	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√				[B] HDMI Mini to HDMI Mini (optional)

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Canon	5DS	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Micro USB (ZW-Micro-002)	1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.	V1.1.1
	5DS R	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√		Micro USB to Micro USB (ZW-Micro-002)	2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode. 3. The camera must stay in live view mode when applying image transmission feature. 4. It is recommended to set [Image Confirmation] to [Off].	V1.1.2R
	6D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√		Micro USB to Mini USB (ZW-Mini-002)	1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera. 2. The camera must be in live view mode when applying image transmission feature. 3. It is recommended to set [Image Confirmation] to [Off].	V1.1.8
	6D2	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Mini USB (ZW-Mini-002)	1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera. 2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode. 3. The camera must be in live view mode when applying image transmission feature. 4. It is recommended to set [Image Confirmation] to [Off].	V1.0.4
	80D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Mini USB (ZW-Mini-002)	1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera. 2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode. 3. The camera must stay in live view mode when applying image transmission feature. 4. It is recommended to set [Image Confirmation] to [Off].	V1.0.2
	EOS R	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Type-C USB (LN-MBUC-B01)	1. Please apply electronic follow focus function in AF mode of the lens. 2. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode. 3. When the camera is in Video mode, select HDMI display >Camera + Monitor to get live preview image both on camera screen and your phone via the transmitter. 4. It is recommended to set [Image Confirmation] to [Off].	V1.3.0

Camera Brand	Camera Model	Image Transmission	Photo		Video		Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus	HDMI Cable Type	Camera Control Cable Type	Camera Settings	Camera Firmware Version	
			Save	Playback	Save	Playback	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode								Photo Mode
Canon	EOS RP	√	√	√	√	√	√	√	√	-	-	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Type-C USB (LN-MBUC-B01)	<ol style="list-style-type: none"> Please apply electronic follow focus function in AF mode of the lens. Turn off Movie Servo AF when applying electronic follow focus function with the camera in Video mode. Set [HDMI info disp] to [Clean / 4K output] or [Clean / FHD output] to get live preview image both on camera screen and your phone via the transmitter. It is recommended to set [Image Confirmation] to [Off]. 	V1.3.0
Nikon	D850	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Micro USB (ZW-Micro-002)	<ol style="list-style-type: none"> Please apply electronic follow focus function in M/A mode of the lens and AF-S or AF-C mode of autofocus mode. Set [Output Resolution] of camera [HDMI] to [1080P]. The camera must stay in live view mode when applying image transmission feature. It is recommended to set [Image Review] to [Off]. 	V1.02	
	Z6	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Type-C USB (LN-MBUC-B01)	<ol style="list-style-type: none"> Please apply electronic follow focus function in M/A mode of the lens and AF-S or AF-C mode of autofocus mode. Set [Output Resolution] of camera [HDMI] to [1080P]. It is recommended to set [Image Review] to [Off]. 	V2.01	
	Z7	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	√	[B] HDMI Mini to HDMI Mini (optional)	Micro USB to Type-C USB (LN-MBUC-B01)	<ol style="list-style-type: none"> Please apply electronic follow focus function in M/A mode of the lens and AF-S or AF-C mode of autofocus mode. Set [Output Resolution] of camera [HDMI] to [1080P]. It is recommended to set [Image Review] to [Off]. 	V2.01	
FUJIFILM	XT3	√	√	√	√	√	√	√	-	-	√	√	√	√	-	√	-	[A] HDMI Mini to HDMI Micro (optional)	Micro USB to Type-C USB (LN-MBUC-B01)	<ol style="list-style-type: none"> Set [connection mode] in [connection setting] to [USB AUTO]; Click [button/dial setting] in [setting] and select [command] for [ISO dial setting (A)]; Select [command] for [aperture ring setting (A)] When using the camera for photo taking, click [power management] in camera setting and select [boost] for [performance]; When using the camera for video taking, set [shutter speed] to [T], [ISO] to [A] and [Exposure Compensation] to [C]. 	V3.10	
Z CAM	E2	√	-	-	√	√	-	√	-	√	-	√	-	√	-	-	-	[C] HDMI Mini to HDMI (optional)	Micro USB to Type-C USB (LN-MBUC-B01)	<ol style="list-style-type: none"> Click [MENU], select [connect] and set [USB] to [serial]; Set [serial] to [controller]. 	V0.93	
BMD	bmpcc	√	-	-	√	√	√	√	√	√	√	√	-	-	-	-	-	[C] HDMI Mini to HDMI (optional)	Micro USB to Type-C USB (LN-MBUC-B01)		V6.6	

Note:

- LCD display of Sony cameras will go black during playback.
- When image quality of Sony cameras is set to [RAW] or [RAW+JPEG], in M, A, S, P mode, digital zoom of non-electronic lens is unavailable (please refer to camera manual for specific usage).
- When connecting camera control cable and HDMI cable to Panasonic GH5, GH5s and S, the LCD display of these cameras will go black. Live preview on both phone and camera is unavailable for the cameras mentioned.
- Conditioned by the Canon camera system, LCD display of Canon 80D/6D2/6D/5DS/5DSR will go black for there is no HDMI output setting. Live preview on both phone and camera is unavailable for the cameras mentioned.
- LCD display of Sony cameras will go blank when [File Format] setting is set to [XAVC S 4K] (please refer to camera manual for specific usage).
- Please use the transmitter with phones or tablets that support 5GHz band as the transmitter adopts 5GHz WiFi technology.
- In Video mode of Fujifilm X-T3, camera parameter control from camera is disabled and you can only adjust camera parameter via stabilizer. Click LV button of stabilizer to resume camera parameter control and click again to return to stabilizer control;
- For Fujifilm X-T3, after connecting to the stabilizer, single click LV button before switching the camera from Photo mode to Video mode; Single click LV button after switching the camera from Video mode to Photo mode. Power on stabilizer, transmitter and camera in the following order: 1. stabilizer; 2. transmitter; 3. camera.