

# WEEBILL-3 Camera Compatibility List

Update Date: May 5th, 2022 Firmware Version: V1.59



V1.00

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	HDMI Cable Type	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode							
Sony α1	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Multi USB/ Type-C to Type-C USB	V1.10	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> <li>5. Please use Type-C to Type-C USB camera control cable to charge the camera.</li> </ol>

Sony a9 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Multi USB	V2.00	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> </ol>
Sony a9	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Multi USB	V6.00	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged.</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> <li>4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".</li> </ol>

Sony a7R4	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Multi USB	V1.20	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> </ol>
Sony ILME-FX3	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Multi USB	V1.00	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> </ol>

Sony α7R3	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.01	<p>1. Please select "PC Remote" for your camera's "USB Connection".</p> <p>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</p> <p>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</p>
Sony α7M3	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.10	<p>1. Please select "PC Remote" for your camera's "USB Connection".</p> <p>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</p> <p>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</p>

Sony a7S3	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Multi USB/ Type-C to Type-C USB	V1.01	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection". (To open a7s3 PC remote control, go to "Menu" and do the following selection : "Network" - "Transfer / Remote" - "PC remote control" - "Open")</li> <li>2. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged.</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> <li>4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".</li> <li>5. Please use Type-C to Type-C USB camera control cable to charge the camera.</li> </ol>
Sony a7R2	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V4.01	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> </ol>

Sony α7M2	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V4.00	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> </ol>
Sony α7S2	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.01	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> </ol>

Sony a7C	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.00	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged.</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> <li>4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".</li> </ol>
Sony a6600	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V1.10	<ol style="list-style-type: none"> <li>1. Please select "PC Remote" for your camera's "USB Connection".</li> <li>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</li> <li>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</li> </ol>

Sony a6500	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V1.06	<p>1. Please select "PC Remote" for your camera's "USB Connection".</p> <p>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</p> <p>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</p>
Sony a6400	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V2.00	<p>1. Please select "PC Remote" for your camera's "USB Connection".</p> <p>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</p> <p>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</p>



Sony a6300	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V2.01	<p>1. Please select "PC Remote" for your camera's "USB Connection".</p> <p>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</p> <p>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</p>
Sony a6100	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V1.00	<p>1. Please select "PC Remote" for your camera's "USB Connection".</p> <p>2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".</p> <p>3. For Sony cameras, after connecting gimbal and camera with control cable, power on the gimbal and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.</p>

Panasonic G9	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Micro USB	V2.1	<ol style="list-style-type: none"> <li>1. Please select "PC (Tether)" for your camera's "USB Connection".</li> <li>2. When using electronic focusing, the camera lens should be in "MF" mode.</li> <li>3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera.</li> </ol>
Panasonic GH5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V2.6	<ol style="list-style-type: none"> <li>1. Please select "PC (Tether)" for your camera's "USB Connection".</li> <li>2. When using electronic focusing, the camera lens should be in "MF" mode.</li> <li>3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera.</li> </ol>

Panasonic GH5S	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.3	<ol style="list-style-type: none"> <li>1. Please select "PC (Tether)" for your camera's "USB Connection".</li> <li>2. When using electronic focusing, the camera lens should be in "MF" mode.</li> <li>3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera.</li> </ol>
Panasonic S1	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.2	<ol style="list-style-type: none"> <li>1. Please select "PC (Tether)" for your camera's "USB Connection".</li> <li>2. When using electronic focusing, the camera lens should be in "MF" mode.</li> <li>3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera.</li> </ol>

Panasonic S5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.0	<ol style="list-style-type: none"> <li>1. Please select "PC (Tether)" for your camera's "USB Connection".</li> <li>2. When using electronic focusing, the camera lens should be in "MF" mode.</li> <li>3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera.</li> </ol>
Panasonic S1H	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V0.53	<ol style="list-style-type: none"> <li>1. Please select "PC (Tether)" for your camera's "USB Connection".</li> <li>2. When using electronic focusing, the camera lens should be in "MF" mode.</li> <li>3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera.</li> </ol>

Panasonic DC-BGH1	-	-	√	√	-	-	√	-	-	-	√	-	-	-	-	√	-	Type-C to Type-C USB	V1.0	1. In the camera IN/OUT setting, please choose PC (Tether) for the USB mode.
Canon 5D Mark III	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Mini USB	V1.3.6	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> </ol>

Canon 5D Mark IV	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Micro USB	V1.0.4	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> <li>5. For Canon 5D Mark IV, please switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes or the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)</li> </ol>
Canon 5DS	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Micro USB	V1.1.1	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> </ol>

Canon 5DS R	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Micro USB	V1.1.2R	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> </ol>
Canon 6D																		Type-C to Mini USB	V1.1.8	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> </ol>

Canon 6D Mark II	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Mini USB	V1.0.4	<p>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</p> <p>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</p> <p>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</p> <p>5. When connecting Canon 6D2 with camera control cable, you can adjust camera parameters via gimbal. Turning on and off the camera would possibly lead to failure in adjusting camera parameters. The issue can be solved by plugging in and out the camera control cable.</p>
Canon 80D	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Mini USB	V1.0.2	<p>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</p> <p>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</p> <p>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</p> <p>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</p>



Canon 90D	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Micro USB	V1.1.1	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera.</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.</li> <li>4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> </ol>
Canon M50	√	√	√	√	-	√	√	√	√	√	√	-	-	-	-	-	-	Type-C to Micro USB	V1.0.3	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> <li>4. For Canon mirrorless cameras, switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes. For EOS R/RP/R5/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)</li> </ol>

Canon EOS M6 Mark II	√	√	√	√	√	√	√	√	√	√	√	-	-	-	-	√	-	Type-C to Type-C USB	V1.1.1	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> <li>4. For Canon mirrorless cameras, switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes. For EOS R/RP/R5/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)</li> </ol>
Canon EOS R5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.10	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> <li>4. For Canon mirrorless cameras, switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes. For EOS R/RP/R5/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)</li> </ol>

Canon EOS R6	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.3.1	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> <li>4. For Canon mirrorless cameras, switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes. For EOS R/RP/R5/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)</li> </ol>
Canon EOS R	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.3.0	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> <li>4. For Canon mirrorless cameras, switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes. For EOS R/RP/R5/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)</li> </ol>

Canon EOS RP	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.3.0	<ol style="list-style-type: none"> <li>1. Please apply electronic follow focus function in AF mode of the lens</li> <li>2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.</li> <li>4. For Canon mirrorless cameras, switch the shooting mode to photo mode before taking photos. When shooting a video is needed, switch the shooting mode to movie mode. Please turn off your camera before switching modes. For EOS R/RP/R5/R6, shutter release can't be used to control video shooting in photo mode otherwise the camera may freeze. (In this case please take out the camera batteries and reinstall and turn on the camera again)</li> </ol>
Nikon D850	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Micro USB	V1.11	<ol style="list-style-type: none"> <li>1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>2. Nikon cameras don't support electronic focusing when recording.</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> <li>4. The "Real-time Preview" feature is for users to switch between electronic viewfinder and optical viewfinder in DSLR by single-clicking the LV button of the gimbal.</li> </ol>

Nikon D780	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.01	<ol style="list-style-type: none"> <li>1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>2. Nikon cameras don't support electronic focusing when recording.</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> <li>4. The "Real-time Preview" feature is for users to switch between electronic viewfinder and optical viewfinder in DSLR by single-clicking the LV button of the gimbal.</li> </ol>
Nikon Z5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.00	<ol style="list-style-type: none"> <li>1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>2. Nikon cameras don't support electronic focusing when recording.</li> <li>3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> </ol>

Nikon Z6	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V3.00	<ol style="list-style-type: none"> <li>When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>Nikon cameras don't support electronic focusing when recording.</li> <li>When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> </ol>
Nikon Z6 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.00	<ol style="list-style-type: none"> <li>When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>Nikon cameras don't support electronic focusing when recording.</li> <li>When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> </ol>

Nikon Z7	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V2.01	<ol style="list-style-type: none"> <li>When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>Nikon cameras don't support electronic focusing when recording.</li> <li>When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> </ol>
Nikon Z7 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Type-C USB	V1.00	<ol style="list-style-type: none"> <li>When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>Nikon cameras don't support electronic focusing when recording.</li> <li>When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> </ol>

Nikon Z50	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	-	Type-C to Micro USB	V1.00	<ol style="list-style-type: none"> <li>When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>Nikon cameras don't support electronic focusing when recording.</li> <li>When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> </ol>
Nikon Zfc	√	√	√	√	-	-	-	√	√	-	-	-	-	-	√	√	-	Type-C to Type-C USB	V1.00	<ol style="list-style-type: none"> <li>When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.</li> <li>Nikon cameras don't support electronic focusing when recording.</li> <li>When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.</li> </ol>



Fujifilm X-T3	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-		Type-C to Type-C USB	V3.10	<p>1. Please set the "connection mode" into "USB TETHER shooting auto" for camera connection settings.</p> <p>2. In Photo mode of Fujifilm, camera parameter control from camera is disabled and you can only adjust camera parameters via gimbal. Press LV button of gimbal to resume parameter control of your camera and press LV button again to return to gimbal control; Fujifilm doesn't support saving photos in RAW format.</p>
Fujifilm X-T4	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-	-	Type-C to Type-C USB	V1.01	<p>1. Please set the "connection mode" into "USB TETHER shooting auto" for camera connection settings.</p> <p>2. In Photo mode of Fujifilm, camera parameter control from camera is disabled and you can only adjust camera parameters via gimbal. Press LV button of gimbal to resume parameter control of your camera and press LV button again to return to gimbal control; Fujifilm doesn't support saving photos in RAW format.</p>

Fujifilm X-T30	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to Type-C USB	V1.30	<p>1. Please set the "connection mode" into "USB TETHER shooting auto" for camera connection settings.</p> <p>2. In Photo mode of Fujifilm, camera parameter control from camera is disabled and you can only adjust camera parameters via gimbal. Press LV button of gimbal to resume parameter control of your camera and press LV button again to return to gimbal control; Fujifilm doesn't support saving photos in RAW format.</p>
ZCAM E2	-	-	√	√	-	-	-	-	√	-	√	-	-	-	-	-	-	Type-C to Type-C USB	V0.95.0	<p>1. Click [MENU], select [connect] and set [USB] to [serial]; Set [serial] to [controller].</p>
BMPCC 4K	-	-	√	√	-	-	√	-	√	-	√	-	-	-	-	√	-	Type-C to Type-C USB	V7.3	
BMPCC 6K	-	-	√	√	-	-	√	-	√	-	√	-	-	-	-	√	-	Type-C to Type-C USB	V6.9.1	
SIGMA fp	√	-	√	-	-	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Type-C USB	V2.00	

Note :

1. This table will be updated in line with firmware update and is subject to change without prior notice;
2. For Sony cameras, after connecting gimbal and camera with control cable, Please first power on the gimbal and then the camera. Make sure the camera has sufficient power to operate. Optical zoom control is available on the gimbal when used with motorized lens. Digital zoom control is available on the gimbal when used with non-motorized lens. Please select zoom option in your camera's settings;
3. When shooting Panorama or Timelapse, it is recommended to turn off the camera's auto review (Sony), image confirmation (Canon), auto review (Panasonic), image review (Nikon) to reduce system latency.
4. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.
5. Before connecting Panasonic G9 with a control cable, please first turn off the USB Power Supply in camera settings























































